


The Parts List of Model 1E34FL Gasoline Engine

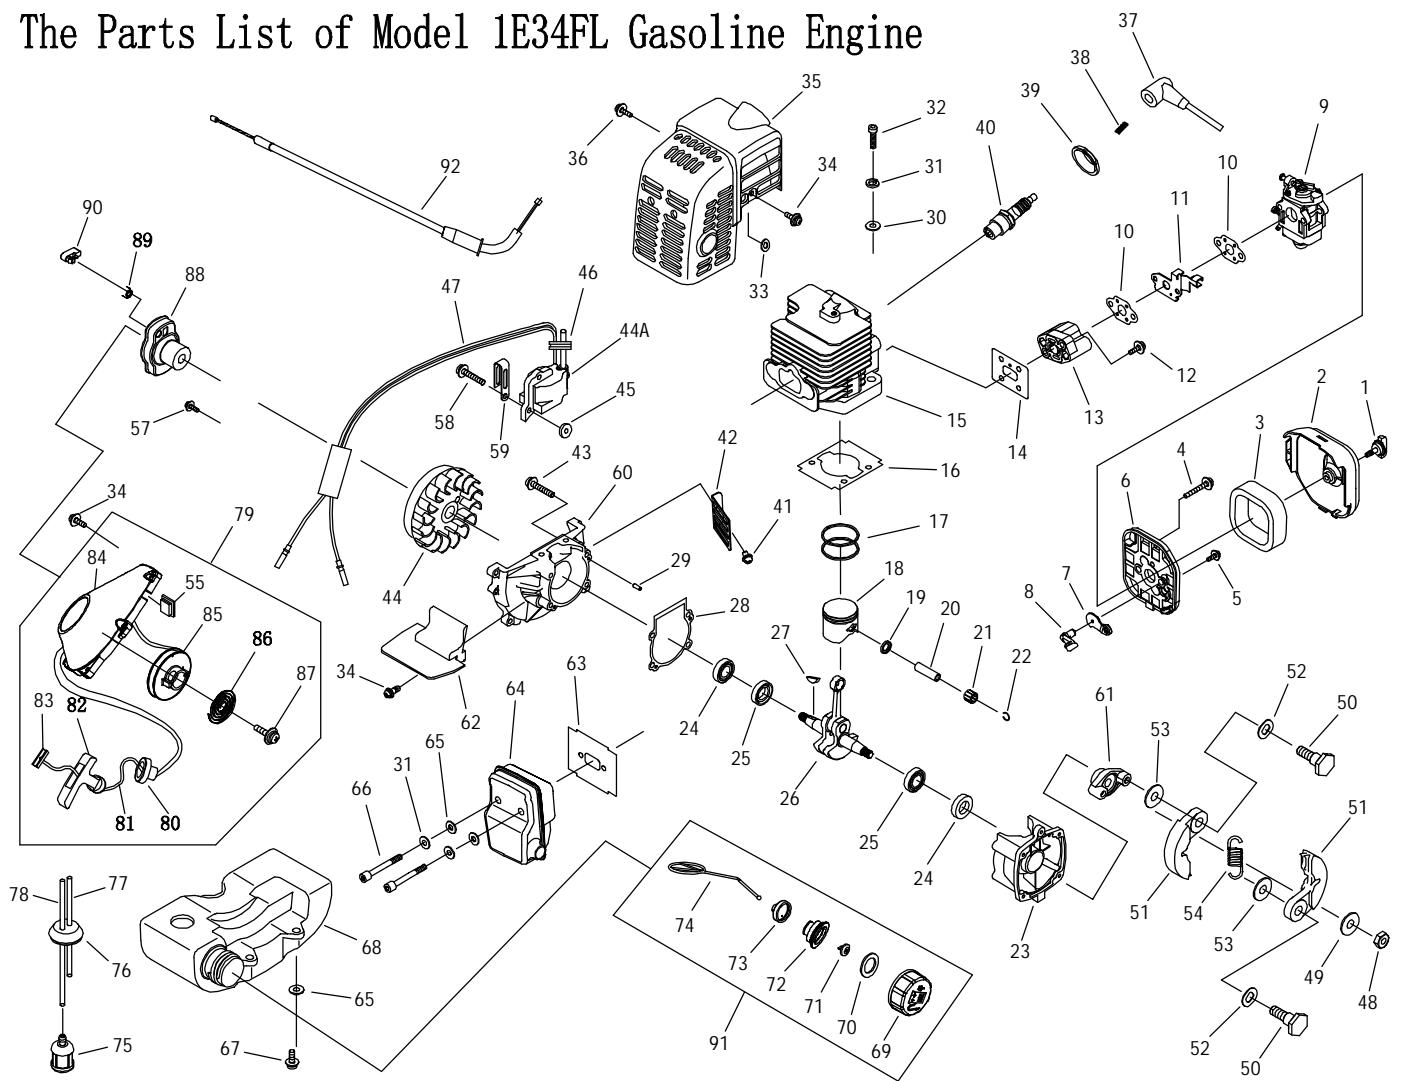

NO.	PART NO.	PART NAME	QTY.	NO.	PART NO	PART NAME	QTY.	NO.	PART NO.	PART NAME	QTY.
1	1E34F. 1. 2	Screw	1	32	GB/T70. 1	Screw M5×25	2	62	1E32FL-8	Gasket	1
2	1E34F. 1-4	Outside Cover	1	33	1E32FL-4	Gasket	1	63	1E34F-3	Gasket	1
3	1E34F. 1-1	Filter Net	1	34	GB9074. 4	Screw M4×16	6	64	1E32FL. 1	Muffler Ass'y	1
4	GB9074. 4	Screw M5x55	2	35	1E32FL-2	Guide Cover	1	65	GB96	Washer 5	5
5	GB845-ST4. 2×12-F-H	Screw	1	36	GB845	Screw ST4. 2×18-F	1	66	GB/T70. 1	Screw M5×50	2
6	1E34F. 1. 1	Inside Cover	1	37	1E34F. 5-2	Cap	1	67	GB9074. 3	Screw M5×16	3
7	1E34F. 1-3	Choke	1	38	1E40F-3A. 8-2	Spring	1	68	1E32FL. 6. 1	Fuel Tank	1
8	1E34F. 1-2	Choke Handle	1	39	1E34F. 5-3	Plug Cap	1	69	1E32FL. 6. 2-1	Fuel Tank Lid	1
9	1E34FL. 3	Carburetor	1	40	RCJ6Y	Spark Plug	1	70	CG420. 1. 3. 1-2	Gasket	1
10	1E34F-1	Gasket	2	41	GB9074. 4	Screw M5×10	1	71	EB-415. 4. 1. 1-1	Inlet	1
11	1E32FL-1	Stand	1	42	1E32FL-9	Guide Cover	1	72	1E32FL. 6. 2-2	Inside Lid	1
12	GB9074. 4	Screw M5×20	2	43	GB9074. 4	Screw M5×30	4	73	1E32FL. 6. 2-3	Inside Lid	1
13	1E34F. 4	Admitting Pipe Ass'y	1	44	1E32FL. 5. 1	Fly Wheel	1	74	1E32FL. 6. 2-4	Chain	1
14	1E34F-2	Gasket	1	44A	1E32FL. 5. 2	Coil	1	75	1E34F. 9. 2-3	Cleaner Cover	1
15	1E34FL-1	Cylinder	1	45	1E32FL-6	Gasket	1	76	1E36FF. 8. 1-1	Plug	1
16	1E34F-9	Gasket	1	46	1E34F. 5-1	Rubber Plug	1	77	1E34F. 9. 2-1	Fuel Pipe	1
17	1E34F. 6-5	Piston Ring	1	47	1E34F. 5. 1	Cord Comp.	1	78	1E34F. 9. 2-2	Fuel Pipe	1
18	1E34FL. 6-6	Piston	1	48	GB6171	Nut M8×1	1	79	1E34FL. 1	Starter	1
19	1E34F. 6-1	Washer	2	49	GB97. 1	Washer 8	1	80	1E34F. 11. 1-1	Pipe	1
20	1E34FL. 6-3	Piston Pin	1	50	1E34F-12	Screw Pin	2	81	1E34F. 11-3	Rope	1
21	1E34F. 6-4	Bearing	1	51	1E34F. 10. 1	Expander Ass'y	2	82	1E36F. 1-1	Start Handle	1
22	1E34F. 6-2	Ring	2	52	1E34F-13	Washer	2	83	1E36F. 1-5	Chain	1
23	1E32FL. 4-1	Crank Case	1	53	1E34F-11	Washer	2	84	1E34FL. 1. 1. 1	Start Cover Ass'y	1
24	1E36F. 2	Seal	2	54	1E34F. 10-1	Spring	1	85	1E34F. 11-2	Start Rope Reel	1
25	GB/T 276	Bearing 6001/P5	2	55	1E32FL-10	Rubber Plug	1	86	1E34F. 11-1	Recoil Spring	1
26	1E32FL. 3. 1	Crank Shaft	1	57	GB9074. 4	Screw M5×20	1	87	GB9074. 6	Screw M5×10	1
27	1E40FP-3Z. 3-1	Key	1	58	GB9074. 4	Screw M4×20	4	88	1E32FL. 2	Start Reel	1
28	1E34F. 7-2	Gasket	1	59	1E40F-3A. 9	Clip	2	89	1E34F. 8-1	Start Claw	1
29	GB/T119. 2	Pin 3×10	2	60	1E32FL. 4-2	Crank Case	1	90	1E34F. 8-2	Start Spring	1
30	GB848	Washer 5	2	61	1E32FL-3	Stand	1	91	1E32FL. 6. 2	Fuel Tank Lid Ass'y	1
31	GB93	Washer 5	4					92	SLP600. 1. 2	Cable COMP.	1