

YD-KU01-62动力部分

序号	代 号	名 称	数量	Description	物料编码	序号	代 号	名 称	Description	数量	物料编码
1	GB/T6186	全金属锁紧螺母M5	2	nut M5	01.03.0102	49	YD45.01.00.08-00	油封15×35×4.5	oil seal 15×35×4.5	1	03.01.2.087
2	GB/T93	弹簧垫圈5	19	spring washer 5	01.04.0091	50	GB/T900	螺栓AYM8-M8×26-8.8	double-screw bolt AYM8-M8×26	2	01.02.1051
3	GB/T97.1	平垫圈5	19	plate washer 5	01.04.0121	51	YD62.00.02-2	张紧块	tensioner block	1	06.06.199
4	YD62.01.09.00-1	消声器盖板	1	muffler cover plate	06.02.095						
5	YD62.01.09.01-00	消声器体	1	muffler body	06.06.166	53	GB/T9074.1	螺钉组合件M5×48	adjust screw M5×48	1	01.01.4102
6	YD62.01.00-4	消声器密封垫	1	muffler sealing plate	08.024	54	YD62.04.00-2	回位扭簧	rod spring	1	06.03.028
7	YD62.01.00-8	消音器连接螺栓	2	muffler connecting screw	06.06.225	55	YD62.04.00-1	刹车控制臂	brake control rod	1	06.01.012
8	GB/T6191	内六角螺钉M5×20	12	hexagon screw M5×20	01.01.2141	56	YD62.04.03-1	限位块	spacing block	1	04.01.11.05906
9	YD62.01.00-1	汽缸体(不带减压阀)	1	cylinder body	05.01.02.010	57	YD62.01.01.01-2	限位板销钉	spacing shield pin	2	01.05.0021
10	YD45.01.11.04-00	火花塞 (NHSP LD L8RTF)	1	spark plug NHSP LD L8RTF	02.35.08	58	GB/T896	开口挡圈6	shield ring 6	2	01.04.1070
11	YD62.01.00-5	进气管密封垫	1	air intake tube sealing plate	08.010	59	YD62.04.03-2	限位销	spacing pin	1	01.05.0031
12	YD62.01.00-2	进气管	1	air intake tube	04.01.11.02206	60	YD62.04.03-3	限位轮	spacing wheel	1	06.06.162
13	YD62.01.00-6	化油器密封垫	1	Sealing plate for carburetor	08.007	61	GB/T896	开口挡圈2	shield ring 2	1	01.04.1061
14	YD62.01.06.00-00	化油器(HAD-238)	1	carburetor	06.06.075	62	YD45.01.00.04-2	机油滤网	oil filter screen	1	04.01.07.05608
15	YD62.01.00-10	化油器调节导套	1	tube to modify the carburetor	04.01.11.01808	63	YD45.01.00.04-1	机油滤体	oil filter	1	06.06.115
16	YD62.01.00.02-00	风门拉杆	1	throttle rod	06.03.108						
17	YD62.01.00.01-00	进气座	1	air intake socket	04.01.11.02306	64	YD62.05.00-3	机油管	oil tube	1	03.01.2.068
18	GB/T6191	内六角螺钉M5×82	2	hexagon nut M5×82	01.01.2171						
19	YD62.01.11.05-00	连接导线	1	connection conducting wire	/	65	YD62.05.00-4	机油管座	oil tube base	1	04.01.11.01906
20	YD62.01.11.04-00	接地线	1	grounding wire	02.34.28						
21	YD62.01.11.03-00	点火导线	1	igniter conducting wire	02.34.27						
22	YD62.01.00-7	海绵过滤块	1	sponge transition block	04.03.0001705	66	YD62.05.00-2	喷油管	oil tube and nozzle	1	03.01.2.060
23	YD62.01.00-9	通气嘴卡簧	1	aeration jet circlip	06.03.068	67	YD62.04.00-3	刹车弹簧	brake spring	1	06.03.060
24	YD45.01.01.02-2	通气嘴	1	aeration	03.01.2.098	68	YD62.04.00-4	弹簧套管	tubo for brake spring	1	03.01.2.011
25	GB/T818	螺钉M4×16	2	screw M4×16	01.01.1453	69	YD62.01.01.01-3	弹簧挂销	brake spring pin	1	01.05.0010
26	GB/T93	弹簧垫圈4	2	washer 4	01.04.0191	70	YD62.00.00-5	刹车盖板	brake cover plate	1	04.01.11.04906
27	GB/T97.1	平垫圈4	2	plate washer 4	01.04.0251	71	YD62.04.00-5	限位板	spacing shield	1	06.02.091
28	YD62.01.11.02-00	点火线圈	1	igniter wire coil	02.35.07	72	GB/T879.2	弹性圆柱销4×8	pin 4×8	1	01.05.0251
29	YD62.01.11.01-00	点火器	1	igniter	02.35.02	73	GB/T119.2	圆柱销3×9	pin 3×8	1	01.05.0161
30	GB/T6171	螺母M10×1	1	nut M10×1	01.03.0131	74	YD62.04.02-00	刹车带部件	brake strap	1	06.03.055
31	GB/T93	弹簧垫圈10	1	spring washer 10	01.04.0211	75	YD62.00.08-00	机油调节器	oil modifier	1	06.06.113
32	YD62.01.10.00-00	飞轮总成	1	flywheel	02.36.04	76	YD62.00.00-10	调节器固定座	oil modifier base	1	03.01.2.017
33	YD62.01.00.03-00	油封13×20×4.5	1	oil seal 13×20×4.5	03.01.2.085	77	YD62.05.00-8	调节器导套	oil modifier connecter	1	03.01.2.016
34	YD62.01.01.00-1	左箱体	1	left case body	05.01.01.158	78	YD62.01.00-14	挡风板	anti-wind plate	1	04.01.11.00506
35	GB/T119.2	销5×10	3	pin 5×10	01.05.0071	79	YD62.00.09-00	蜗杆	turbine	1	06.06.157
36	YD62.01.00-3	汽缸密封垫	1	cylinder sealing plate	08.015	80	YD62.00.00-14	定位管	fixing tube	1	06.06.049
37	YD62.01.03.00-1	活塞环	2	piston ring	06.06.093	81	YD62.05.01-00	机油泵	oil pump	1	06.06.108
38	YD62.01.03.02-00	活塞	1	piston	06.06.086	82	GB/T818	螺钉M5×18	screw M5×18	5	01.01.1071
39	YD62.01.03.00-2	活塞销	1	piston pin	06.06.101	83	YD62.01.00-11	离合器垫圈12×48×1	clutch washer12×48×1	1	06.02.059
40	YD45.01.03-4	活塞销卡簧	2	piston pin circlip	06.03.030	84	YD62.01.13.01-00	蹄块总成	clutch assembly	1	05.01.04.0033
41	YD62.01.03.00-3	滚针轴承挡圈	2	needle bearing ring	06.06.056	85	YD62.01.13.01-2	蹄块	shoe block	3	06.01.014

42	YD45.01.03.02-00	滚针轴承11×15×12.5	1	needle bearing11×15×12.5	01.05.1130	86	YD62.01.13.01-3	离合器拉簧	clutch extension spring	1	06.03.045
43	YD62.01.03.01-00	曲轴连杆部件	1	crankshaft connecting bar componen	06.05.007	87	YD62.01.13.01-1	保持架	retainer	1	06.01.002
44	GB/T1099	半圆键3×3.5×10	1	semicircular key 3×3.5×10	01.06.0031	88	YD62.01.00.04-00	滚针轴承10×14×13.5	needle bearing 10×14×13.5	1	01.05.1100
45	GB/T276	轴承6202 D级15×35×11	2	bearing6202 grade D 15×35×11	01.05.1260	89	YD62.01.13.00-1	离合器外壳	cluth shell	1	06.05.005
46	YD62.01.01.00-2	箱体密封垫	1	case body sealing plate	08.018	90	YD62.01.00-12	链轮	sprocket	1	06.06.127
47	GB/T893.1	挡圈35	1	ring35	01.04.1011	91	YD62.01.00-13	链轮挡圈8×23×2	sprocket plate 8×23×2	1	06.02.064
48	YD62.01.01.01-1	右箱体	1	right case body	05.01.01.163	92	GB/T6177.2	法兰螺母M8×1左	flange nut M8×1 left	1	01.03.0061

YD-KU01-62机体部分

序号	代 号	名 称	数量	物料编码	序号	代 号	名 称	数量	物料编码
1	YD38-3.05.01-00	空滤锁母	1	air filter lock nut 04.01.07.06806	37	YD38-3.03.00-2	燃油管座	1	fuel tube base 03.01.2.073
2	YD38-3.05.00-6	锁母垫圈15×26×1	1	lock nut washer 15×26×1 03.01.2.056	38	YD62.03.00-9	燃油管卡簧	1	fuel tube circlip 06.03.034
3	YD62.00.00-1	空滤器罩	1	air filter cover 04.01.11.02905	39	YD45.03.03-00	汽油滤体部件	1	petrol filter components 04.01.07.09608
4	YD62.01.08.00-00	空滤器	1	air filter 04.01.11.02408	40	YD62.00.00-12	长座螺钉M6×16	2	screw M6×16 06.06.215
5	YD62.01.08.00-1	空滤器垫片	1	air filter sealing gasket 03.01.2.054	41	GB/T819.1	沉头螺钉M5×14	4	screw M5×14 01.01.1053
6	YD62.00.00-3	防尘板	1	anti-dust base 04.01.11.01506	42	GB/T956.1	锥形锁紧垫圈5	4	washer 5 01.04.0151
7	YD38-5.02.00-4	启动手柄	1	start handle 04.01.06.05109*	43	YD62.00.06-00	左减震座	1	left shock rubber base 03.01.2.096
8	YD62.02.00-5	启动拉绳	1	start stretching wire 04.03.0001608	44	YD62.00.07-00	右减震座	1	right shock rubber base 03.01.2.094
9	GB/T818	螺钉M5×18	4	screw M5x18 01.01.1071	45	YD62.03.00-5	油箱侧减震块	1	anti-shock rubber 1 03.01.2.089
10	GB/T93	弹簧垫圈5	7	spring washer 5 01.04.0091	46	YD62.03.00-4	油箱减震块	1	anti-shock rubber 2 03.01.2.091
11	GB/T97.1	平垫圈5	7	plate washer 5 01.04.0121	47	YD62.03.00-12	油箱	1	fuel tank 04.01.11.06008
12	YD62.00.03-1	燃油口盖	1	fuel tank cover 04.01.11.07807*	48	YD62.03.00-11	油箱减震板	1	crank shock board 03.01.2.090
13	YD38-3.03.02-3	密封垫圈24×34×1.5	1	packing washer 24×34×1.5 03.01.2.059	49	YD45.03.00-1	减震橡胶	1	anti-shock rubber 03.01.2.044
14	YD45.01.00.05-2	防掉板	2	anti-drop plate 04.01.07.04408	50	YD62.03.00-10	底座右减震块	1	right shock block of case 03.01.2.014
15	YD62.02.00-6	油箱减震圈	1	anti-shock rubber circle 03.01.2.092	51	YD62.03.01-00	底座体	1	base body 04.01.11.01105*
16	YD62.02.01-00	启动器罩	1	starter cover 04.01.11.04105*	52	YD38-3.03.00-4	前盖	1	front cover 04.01.04.06506
17	YD62.02.00-4	启动盘簧	1	start coil-spring 06.03.085	53	YD62.00.00-2	上盖板	1	upper cover plate 04.01.11.05405
18	YD62.02.00-2	盘簧压盖	1	coil-spring gland 04.01.11.03408	54	GB/T818	螺钉M5×14	5	Screw M5×14 01.01.1331
19	GB/T845	自攻螺钉ST2.9×7.5	2	screw ST2.9×7.5 01.01.1323	55	YD62.00.00-4	防冻板	1	anti-freezing plate 04.01.11.01606
20	YD62.02.02-00	启动盘	1	start plate 04.01.11.08101	56	YD62.04.01-00	前挡板	1	front damper 04.01.11.04607
21	GB/T9074.19	自攻螺钉组合件ST4.8×13	1	tapping screw ST4.8×13 01.01.4093	57	YD62.00.00-13	轴位螺钉M5×18	1	screw M5×18 06.06.228
22	YD62.02.00-00	起动机总成	1	starter assembly 05.01.04.0195	58	YD62.00.04-1	机油口盖	1	oil tank cover 04.01.11.07907
23	YD62.02.00-1	导流罩	1	bossing 04.01.11.00606	59	YD62.00.03-2	O形圈23×3.5	1	O shape circle 23×3.5 03.01.2.100
					60	YD62.00.00-11	减震座锁母	2	anti-shock lock nut 04.01.11.02106
					61	YD62.00.05-00	前减震座	2	front anti-shock base 03.01.2.064
24	GB/T845	自攻螺钉ST4.8×13	5	tapping screw ST4.8×13 01.01.1511	62	YD62.00.00-6	齿板	1	teeth blade 06.02.010
					63	YD62.00.00-8	箱体垫板	1	cover plate 06.02.094
					64	GB/T818	螺钉M4×10	1	screw M4×10 01.01.1181
25	YD38-3.01.11.04-00	熄火开关	1	extinction switch 02.05.16	65	YD45.08.00-2	垫板	1	spacer plate 04.01.07.08606
26	YD62.03.02-00	手柄盖	1	handle cover 04.01.11.06405	66	GB/T845	自攻螺钉ST4.2×8	1	tapping screw ST4.2×8 01.01.1351
27	YD62.03.00-3	油门推杆	1	acceleration rod 06.03.087	67	YD62.00.01-1	右侧盖垫板	1	right cover plate 06.02.101
28	YD62.03.00-1	扳机	1	trigger 04.01.11.00106	68	YD62.00.10-00	右侧盖	1	right cover 04.01.11.07205*
29	YD45.03.00-12	扳机扭簧	1	trigger torsion rod spring 06.03.007	69	GB/T6177.1	法兰螺母M8	2	flange nut M8 01.03.0052
30	YD62.03.00-2	扳机控制臂	1	trigger control rack 04.01.11.00206	70	YD38-3.06.03-00	减震座	1	anti-shock base 03.01.2.046
31		平衡器总成	1	balancer 04.01.07.07208	71	GB/T845	自攻螺钉ST4.8×16	1	tapping screw ST4.8×16 01.01.1541
32	YD45.03.00-7	平衡器盖	1	balancer cover	72	YD38-3.00.00-8	大防尘盖	1	anti-dust cover 04.01.04.00306
33	YD45.03.00-6	平衡器橡胶	1	balancer rubber	73	YD62.00.00-7	挡链块	1	chain guide dog 06.02.017
34	YD45.03.00-5	平衡器体	1	balancer body	74	YD38-3.01.00-16	挡链块螺钉	1	chain guide dog screw 06.06.218
35	YD38-3.03.00-3	平衡器座	1	balancer base 03.01.2.063	75	YD62.06.00-00	提把总成	1	front handle assembly 06.06.149
36	YD62.03.00-8	燃油管	1	fuel tube 03.01.2.069	76	YD62.00.00-9	提把垫板	1	front handle plate 06.02.084
					77	GB/T845	自攻螺钉ST4.8×19	4	tapping screw ST4.8×19 01.01.1501